



Decorative Kitchenhood

OPERATING MANUAL

Please read the instruction carefully before any operation

 
Important Note

- Please read the operating manual carefully before installation / use.
- The installation work must be undertaken by a qualified and competent person who has sound experience in installing cooker hoods. Please ensure that the mains voltage corresponds to the one mentioned on the rating label of the appliance.
- The manufacturer disclaims all liability for any damage or injury caused as a result of not following the instructions for installation and use contained in this manual.
- Save this manual for future reference.

Installation Instructions

The cooker hood should be installed at a distance of 70-75cm above the cook top/hob for best results. See Pic1.

1. Using the hood mounting bracket, mark the holes to be made on the wall.
2. Drill 3x8 mm holes for the mounting bracket.
3. Insert expandable wall plugs and fix the mounting bracket with screws.
4. Carefully hang the hood onto the bracket.
5. Fix the air-outlet tube onto the one way valve/outlet adaptor on the top.
6. Carefully guide the air-outlet pipe through the provision/hole made in the wall for exhaust air.
7. Make the electrical connections with the mains.

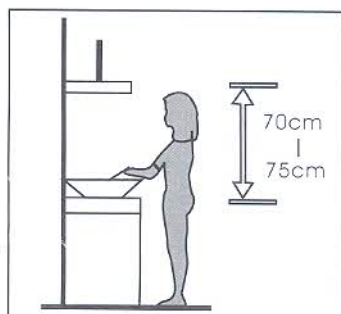


Pic1

Important Note for Installation

- Before installation, please clean the area where the hood is supposed to be installed.
- Do not connect the hood to exhaust ducts carrying combustion fumes of other appliances (boilers, fireplaces, etc.)
- If the hood is used in conjunction with non-electrical appliances (e. g. gas burning appliances), a sufficient degree of ventilation must be guaranteed in the room in order to prevent the backflow of exhaust gas. The kitchen must have an opening directly with the open air in order to guarantee the entry of clean/fresh air.
- Two or more people are required to install or move this appliance. Failure to do so can cause physical injuries.

 - After installation, carefully check that the cooker hood has been installed in a straight line. Kindly check the following picture for reference in this regard.

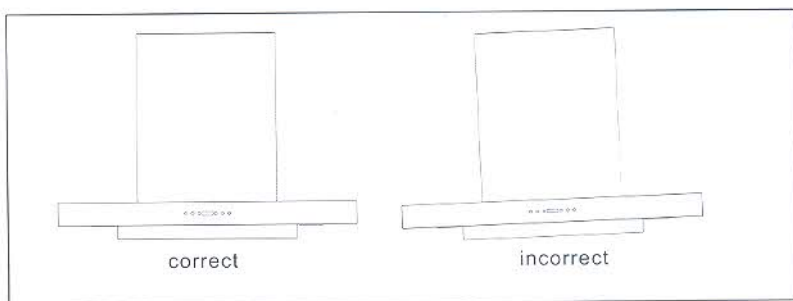

Pic5

 
Important Safeguards

- The cooker hood has been designed only for domestic use, for eliminating kitchen fumes.
- Never use the hood for purposes other than what it has been designed for.
- Never leave high naked flames under the hood when it is in operation.
- Adjust the flame intensity to direct it onto the bottom of the pan only; making sure that it does not engulf the pan sides.
- Do not check the status of the filter while the range hood is operating.
- Do not touch the lamps after appliance has been in use.
- Avoid free flames, as it is damaging for the filter/product and is a fire hazard.
- Constantly check food while frying. Overheated oil may become a fire hazard.
- Children don't recognize the risks of electrical appliances. Therefore use of this appliance by children is not recommended.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or who have lack of experience and knowledge to use the appliance, unless they are in supervision of the person responsible for their safety and have been given instructions for use of the appliance by their supervisor.
- Children should be supervised to ensure that they do not play with the appliance.
- There should be adequate ventilation of the room when the cooker hood is being used at the same time as appliances working on gas or other fuels.
- There is a fire risk if cleaning is not carried out in accordance with instructions provided in here.
- Do not do flambé cooking under the cooker hood.

- The exhaust air must not be discharged into a flue which is used for exhausting fumes from other appliances burning gas or other fuels.
- The cooker hood is for domestic use only and is not meant for commercial use.
- The cooker hood and its filter should be cleaned regularly in order to maintain good efficiency.
- Disconnect the appliance from the main supply prior to cleaning or undertaking any maintenance.
- Do not disconnect the appliance with wet hands.
- Do not use this appliance outdoors.
- Do not try to repair the appliance by yourself. In case of a malfunction, please contact the nearest authorized service center for examination and repairs.

Operating Instructions

This cooker hood is operated with a feather touch control panel.



Setting the Clock

When the cooker hood will be connected to the mains, the display will show 12:00

1. Now place your finger on the "Set" button for about 2-3 seconds.
2. The '12' on the hour side will start flashing. Please use the "+" and "-" buttons on the control panel for setting the correct hour.
3. Now touch the "Set" button again. The '00' on the minutes side will start flashing. Please use the "+" and "-" buttons on the control panel for setting the correct minutes.
4. Now touch the "Set" button again. The time as fed in by you will be set.

Please note that once the cooker hood has been disconnected from mains, you will have to set the time again.

Operation

Place your finger on the "On/Off" button on the control panel.

The lights on the control panel will come on. The cooker hood is now in stand-by mode.

Touch "☺" button on the panel, the cooker hood will start operating on LOW speed.

Touch "☺☺" button on the panel, the cooker hood will start operating on MEDIUM speed.

Touch "☺☺☺" button on the panel, the cooker hood will start operating on HIGH speed.

Press the "On/Off" button in order to stop the operation.

Light

Touch the "Light" button on the panel, the lights will come on.

Repeat the action in order to switch-off the lights.

AUTO-CLEAN

A unique "Auto-Clean" function has been provided in this cooker hood. This cooker hood comes equipped with an oil collector tray. During cooking, the excess oil and dirt which gets sucked into the cooker hood gets drained into this oil collector.

However, over the time, some traces of stubborn grease and oil can get stuck inside the cooker hood.

In order to eliminate this stubborn grease and clean the cook hood from inside, we have designed this unique feature.

Please first touch ON/OFF button, then touch "Auto-Clean" button on the panel. The display mention heating time of 10 minutes and begin to count down. The light for auto clean with start blinking.

After preheat time of 9 minutes. The indicating lamp of low speed were lit at the same time. The motor will auto-start working of 1minute. Auto clean function work over once the countdown complete. The cooker hood system restore the stand-by mode. To avoid any bad influence for clean performance, please do not cooking during time of auto clean.

All the grease through the inside oil outlet pipe which fixing on motor housing. then drop out into oil collector tray located at the back of the filter

The auto-clean function will stop operating at the end of 1 minute. Wait for a moment and then carefully remove the oil collector tray ensuring that you do not spill the grease.

Drain the collected grease into a sink and clean the oil collector tray with a soft cloth.

Fix the oil collector tray back at its place by sliding it in the rails at both the ends. Ensure that the tray is fixed properly.

Your cooker hood is clean as new from inside now.

Maintenance and Cleaning

Proper maintenance of the cooker hood will assure good performance of the unit.

- Disconnect the hood from the mains supply before cleaning or carrying out any maintenance work.
- Clean the grease filters regularly after the specified period of time.
- Clean the hood using a damp cloth and a neutral liquid detergent. Never pour water on the cooker hood or its motor.
- Never use any harsh chemicals and abrasives to clean the cooker hood and its parts as this will damage the product beyond repair.

 
Filter

This cooker hood has been provided with a high quality stainless steel filter.

The filter has been fixed onto the hood with the help of 2 locks. Kindly unlock the filter in order to clean it.

The grease filter should be cleaned frequently (every month of operation, or more frequently in case of heavy use). Use a warm neutral detergent and water solution. Soak the filters in this solution for about 2-3 minutes. Wear appropriate water proof gloves and clean with a soft brush. Do not apply too much pressure as it will damage the filters. Place the filter under running water in order to wash away the soap and dirt.

Install the clean filter back on to the cooker hood with the help of two screws. Make sure that the filter is dry before installing.

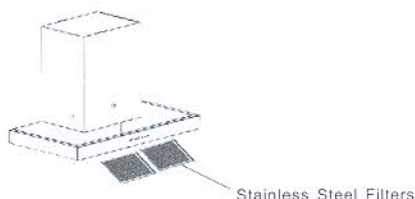

Oil Collector Tray

This cooker hood has been provided with a unique high quality PC oil collector tray.

During use, the excess oils and dirt which may get sucked into the cooker hood are drained out through a special drain located at the back of the filter.


In order to clean the drained oil, simply pull the tray towards yourself. Drain the oil/dirt and wipe the oil collector clean with a soft cloth.

Insert the oil collector tray back at its place by aligning it with the rails at both the ends and push it back until it has been fixed.

Specifications & Technical Parameters

Rated Voltage	230V
Rated Power Frequency	50Hz
Total Power	183W
Motor	Single
Airflow	1100 m ³ /hr
Diameter of Air-Outlet Adapter	150 mm
Auto clean type	Electro-thermal auto clean

 Electrical Diagram

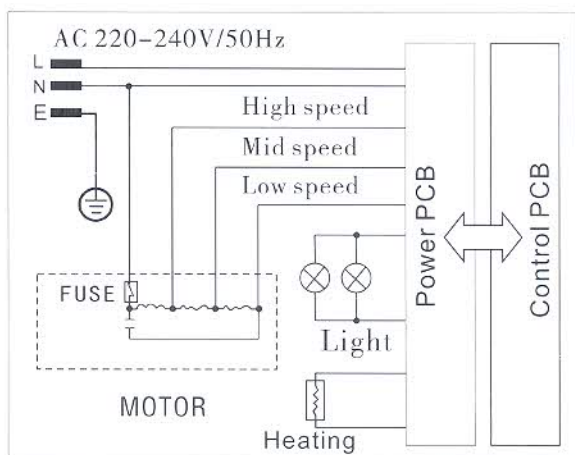

Note

In view of continuous improvement, the appearance, design, features and specifications of the product are subject to change with-out prior notice.